

4ALL COMPACT E multifunction system

B&M SKU ID10575/E | Idral code 10575/E

Installation sequence

1. Use the drilling and service connection drawing for Idral 10575/E in the original ISTA32-03 instructions. Check that the wall can carry the unit; the manual requires a minimum tensile strength of 50 kg for each fastener.
2. Fit and align the modules, then secure them and the internal component plate using the model-specific arrangement. Keep service components accessible.
3. Use clean, filtered water. Purge the supply pipes before connection and after a temporary shutdown.
4. Connect the water supply in the solenoid flow direction. Supply pressure must be 1-8 bar and inlet temperature 5-70 °C.
5. Position the soap reservoir and pump as shown in the manual. Keep tubing short, follow the inlet and outlet markings and use soap with viscosity 1000-3500 cps. Fill and prime the circuit by repeated activation for 2-3 minutes.
6. Place the dryer in the dedicated enclosure or accessible under-basin service space and connect the air tube without obstructing the air path.
7. Have a qualified installer make the 230 V electrical connections and the low voltage connections with the correct polarity. Keep the sensor area clear during startup, then test every fitted function.

Important

Electrical protection must follow the manufacturer instructions, including a 30 mA RCD and a bipolar isolator with at least 3 mm contact separation.

Use the original model drawings for drilling, tubing limits and connections. Do not change the orientation of internal components.

Source: Idral ISTA32-03. This summary accompanies the original manufacturer instructions supplied separately. Read the original instructions for complete safety information, model diagrams and service procedures.