

INSTALLATION GUIDANCE

EASY square stool

B&M SKU: ID15507.1 Idral code: 15507.1

Installation sequence

- 1 Assemble the components in the sequence shown in the accompanying Idral drawings.
- 2 Check the seat position before each use. All four feet must rest firmly on the supporting surface.
- 3 Maximum load-bearing capacity: 130 kg.

Important


The accompanying technical specification is the reference for dimensions, materials, mounting details and supplied components. Installation should be completed by a competent installer.

INSTALLATION GUIDANCE

EASY square stool

B&M SKU: ID15507.1 Idral code: 15507.1

Idral assembly details

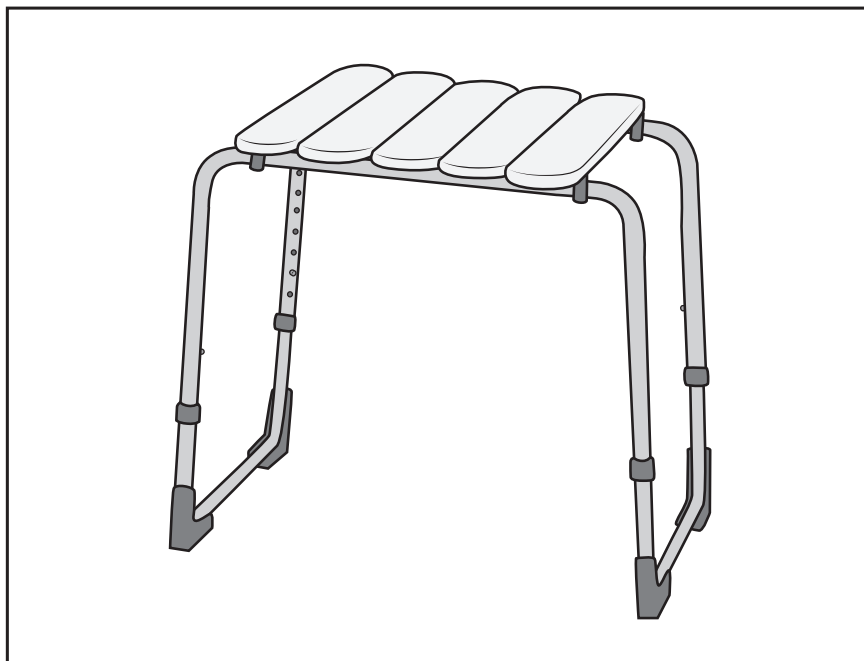


Source: Idral ISTA18-02 / page 6

INSTALLATION GUIDANCE

EASY square stool

B&M SKU: ID15507.1 Idral code: 15507.1

Idral assembly details

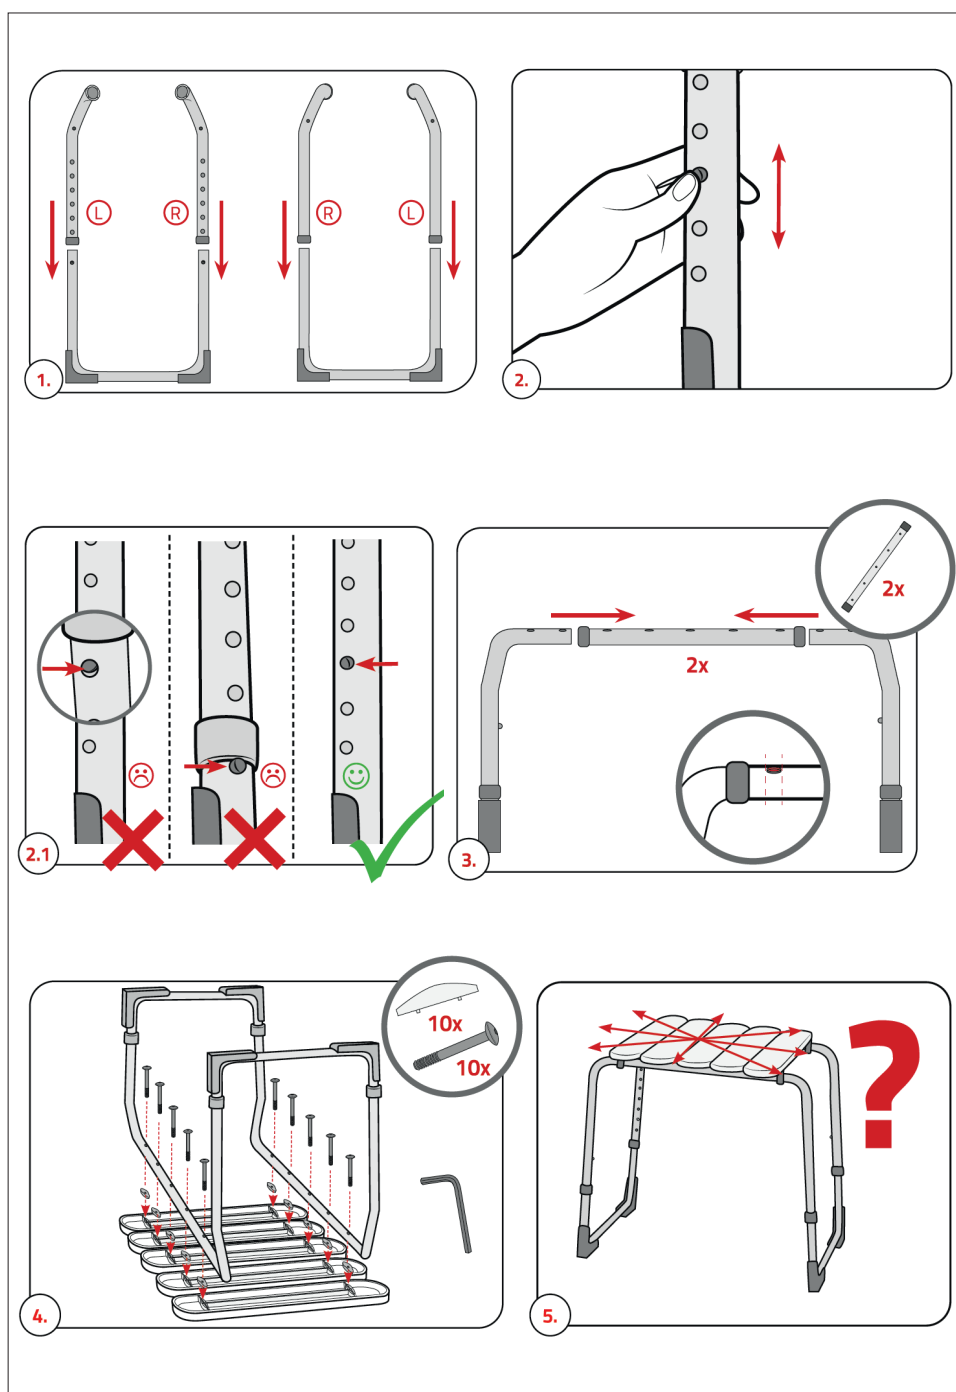

Source: Idral ISTA18-02 / page 7