

INSTALLATION GUIDANCE

Hand shower with flexible hose and chrome sliding support for grab bars Ø 30/32

B&M SKU: ID12014 Idral code: 12014

Installation sequence

- 1 Confirm that the sliding holder suits the selected grab bar diameter: 30 or 32 mm.
- 2 Fit the holder to the grab bar using its supplied clamp arrangement, following the technical drawing.
- 3 Check that the holder adjusts and locks securely without damaging the grab-bar finish.
- 4 For 12014, fit the hand shower and hose, then run water and check connections for leaks. Version 12014S supplies the holder only.

Important


The accompanying technical specification is the reference for dimensions, materials, mounting details and supplied components. Installation should be completed by a competent installer.

INSTALLATION GUIDANCE

Hand shower with flexible hose and chrome sliding support for grab bars Ø 30/32

B&M SKU: ID12014 Idral code: 12014

Idral assembly details

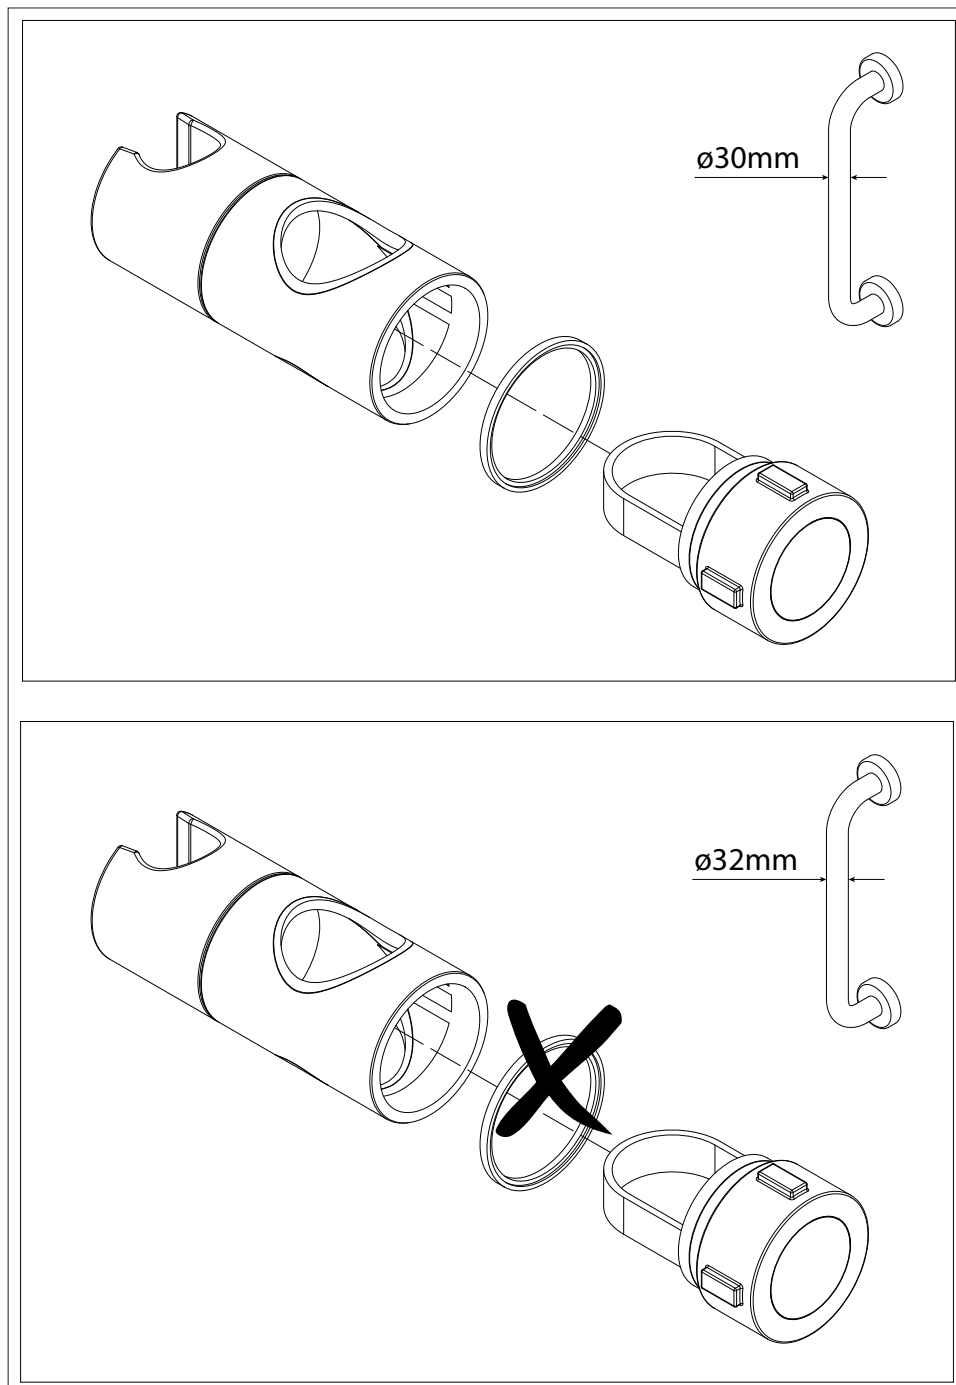

Source: Idral ISTA28-01 / page 3